KitchenAid® COOKTOP PARTS

30" Slide−In Electronic Range
DESIGNER STYLE

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

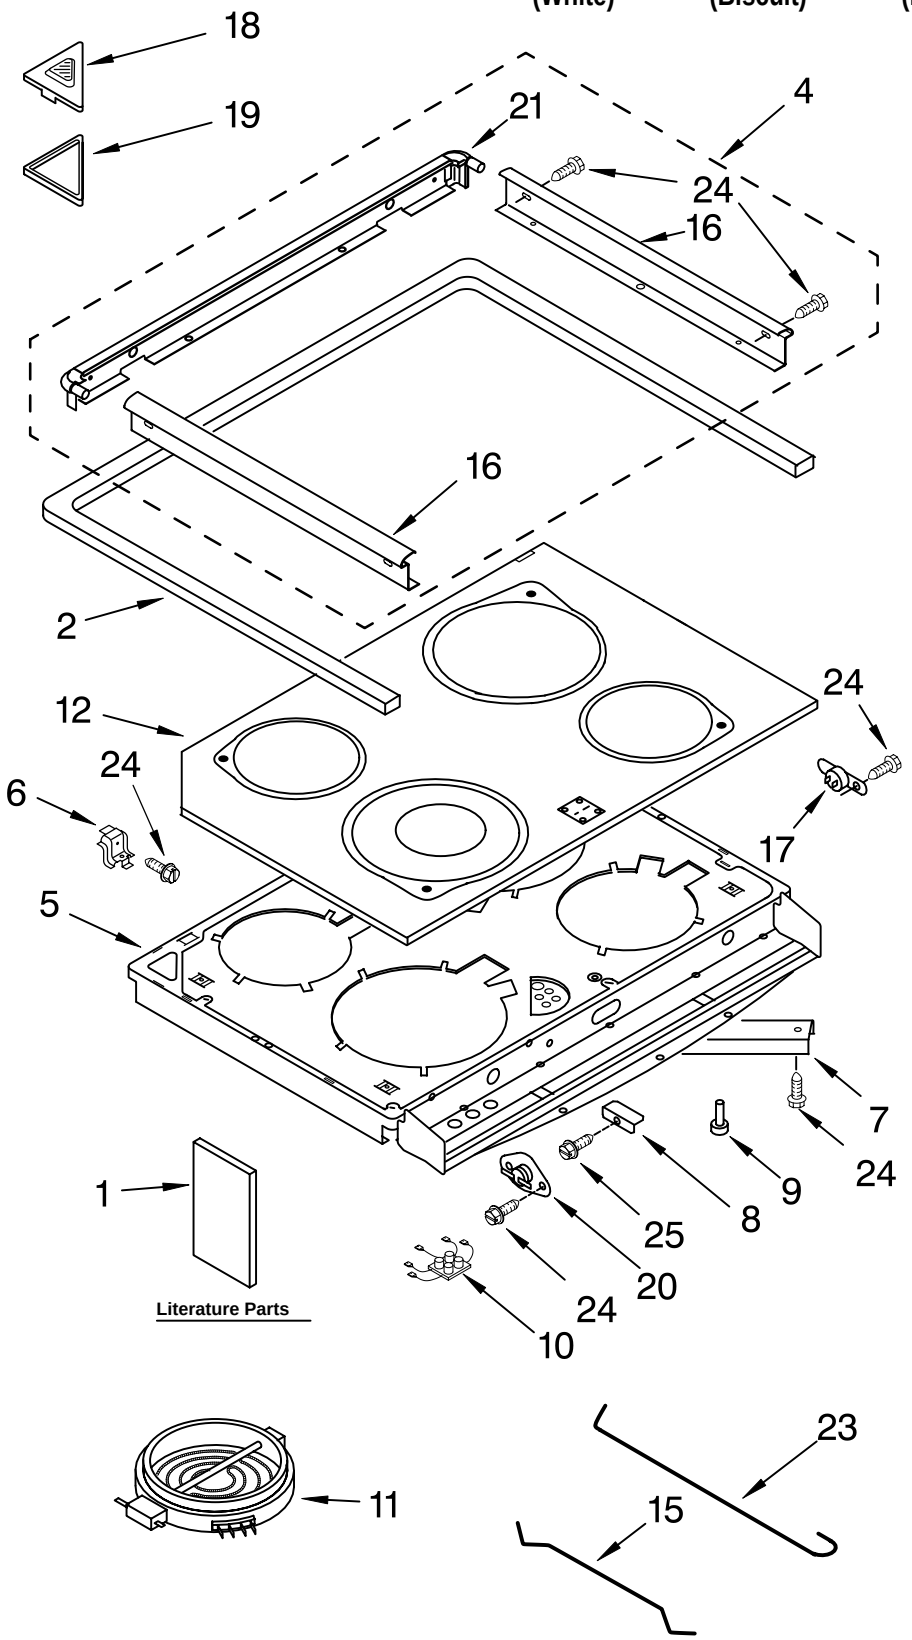

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9755234	Installation Instructions
	LIT9754287	Use & Care Guide
	LIT9752686	Smart & Easy Guide
	LIT9754365	Tech Sheet
	LIT9754373	Wiring Diagram
	LIT9752775	Template, Anti−Tip
	LIT3191638	Safer Cooking Tips
2	9754103	Gasket, Cooktop (Front & Sides)
4		Frame, Cooktop
	9781832PW	White
	9781832PC	Biscuit
	9781832PB	Black
5	9752892	Support, Element
6	9751629	Bracket, Pivot
	9752003	Washer, Pivot
7	9781553	Brace, Support
8	9753691	Support Clips (4)
9		Bumper, Rubber
	9750969	White (4)
	9780771	Black (4)
10	9781936	Hot Light
11		Element, Surface
	8272564	1500W − LR
	9753997	2500W − RR
	8272566	1800W − RF
	8272563	1000/2400W − LF
12		Cooktop, Ceran
	9753711CW	White
	9753711CC	Biscuit
	9753711CB	Black
15	9781460	Rod, Small Ceran Element
16		Trim, Side
	9781828PW	White
	9781828PC	Biscuit
	9781828PB	Black
17	341196	Thermo−Disc
18	9751800	Vent, Cover
19	9751841	Gasket, Vent
20	9751984	Bimetal, Fan
21		Trim, Back (Includes Endcaps)
	9781831PW	White
	9781831PC	Biscuit
	9781831PB	Black
23	9781459	Rod, Large Ceran Element
24	9780265	Screw, 10−16 x 3/8
25	9751871	Screw, 10−16 x 1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

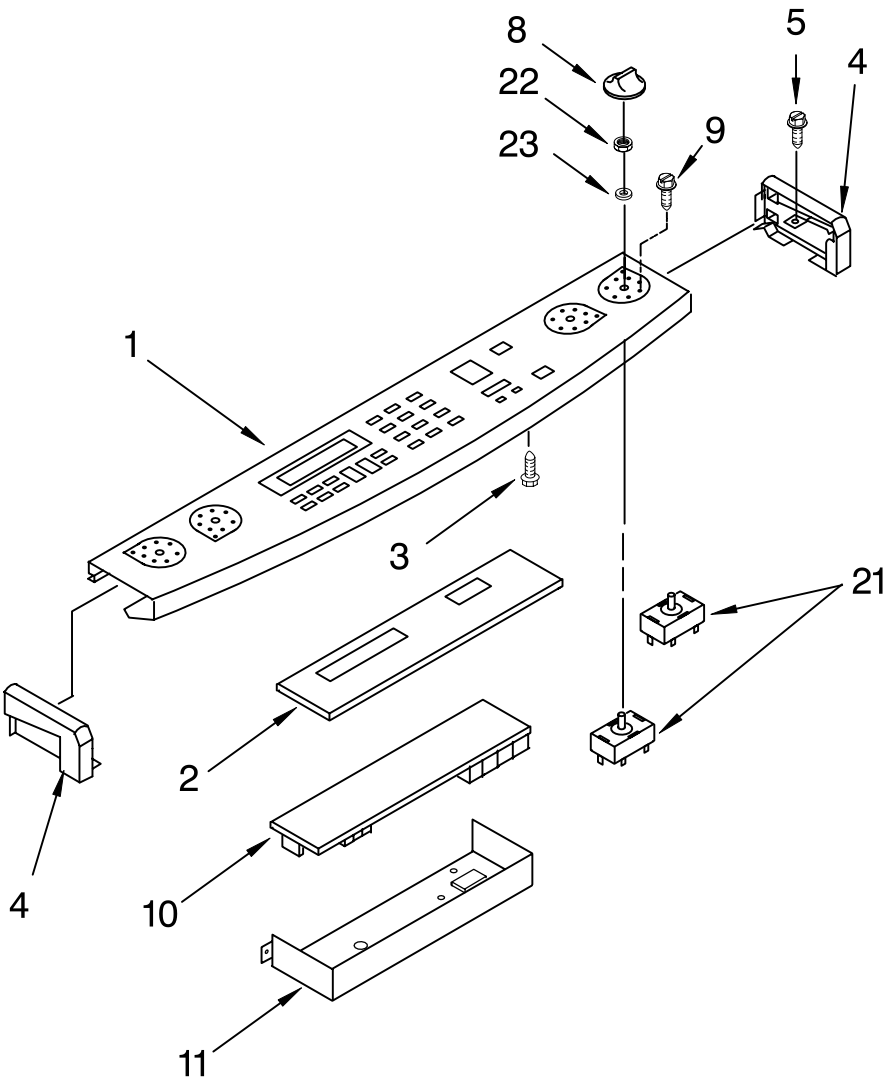

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass (Assembly)
	9754343CW	White
	9754343CC	Biscuit
	9754343CB	Black
2	9754374	Microcptr
3	9780271	Screw, 8−18 x 1/4
4		End Cap Right Hand
	9751040FW	White
	9751040FC	Biscuit
	9751040FB	Black
		Left Hand
	9751039FW	White
	9751039FC	Biscuit
	9751039FB	Black
5	9780265	Screw, (2) 10 x 3/8
8		Knobs, Control (4)
	9750372FW	White
	9750372FC	Biscuit
	9750372FF	Black
9	9751871	Screw (2) #10 Type B 1"
10	9754385	Microcptr
11	9755021	Sheild, Control Panel
21		Switch, Infinite
	9751364	1500W − LR
	9751363	1800W − RF
	9751362	2500W − RR
	9755175	1000/2400W − LF
22	422617	Nut, Mounting
23	9781455	Seal, Switch (4)

DOOR AND DRAWER PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

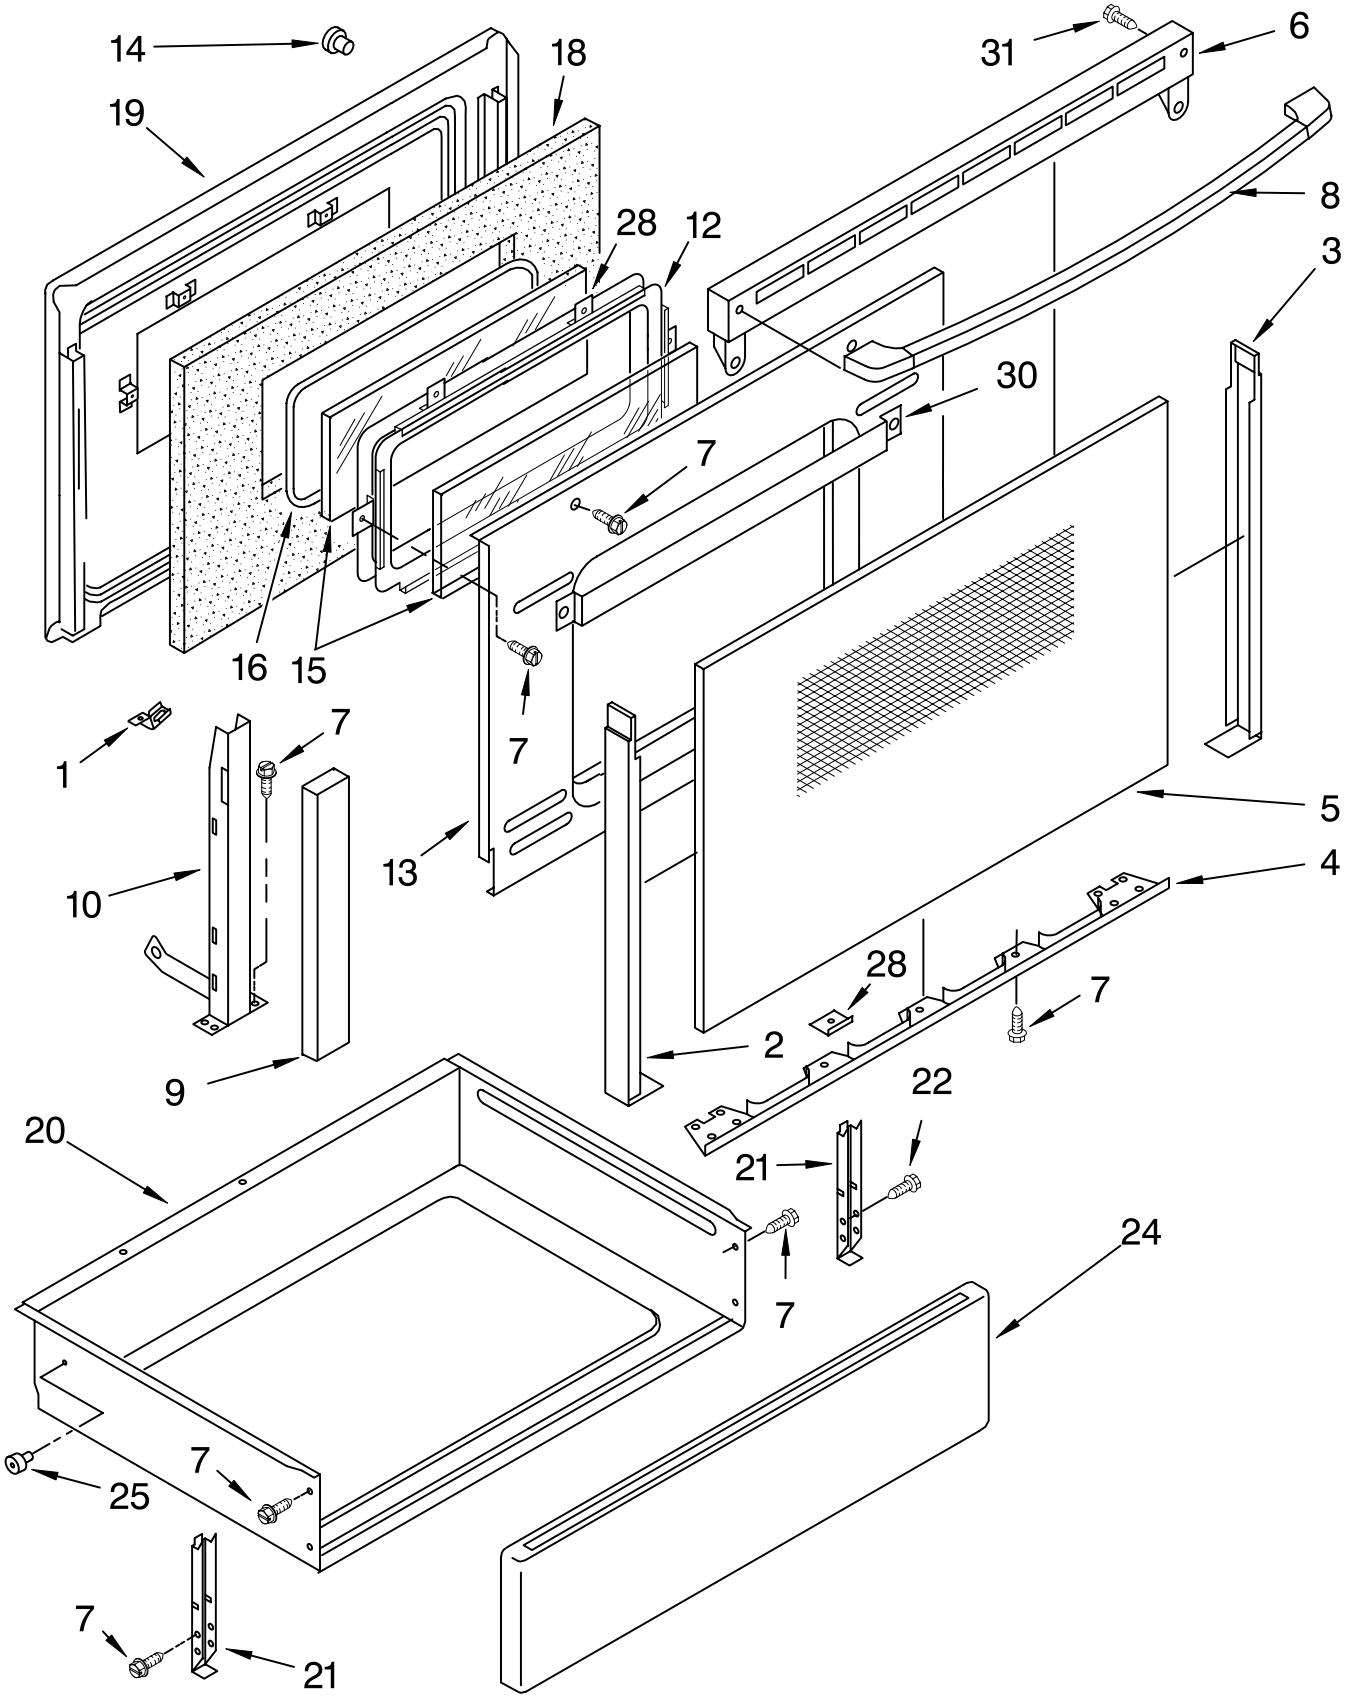

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass
2		Trim, Door−Left
	9782003PW	White
	9782003PC	Biscuit
	9782003PB	Black
3		Trim, Door−Right
	9782004PW	White
	9782004PC	Biscuit
	9782004PB	Black
4		Trim, Door Bottom
	9781209PW	White
	9781209PC	Biscuit
	9781209PB	Black
	9780265	Screw, 10 x 3/8
5		Glass, Door
	9781627PW	White
	9781627PC	Biscuit
	9781627PB	Black
6		Vent, Door
	9753498GW	White
	9753498GC	Biscuit
	9753498GB	Black
7	9780265	Screw, 10−16 x 3/8
	9781659	Gasket, Door Vent Vent Side
8		Handle, Door
	9780523PW	White
	9780523PC	Biscuit
	9780523PB	Black
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Pyro Door
16	9755177	Seal, Glass
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	9780272	Screw, 10−16 x 1/2
24		Front, Drawer
	9782108PW	White
	9782108PC	Biscuit
	9782108PB	Black
25	423713	Support, Roller
	90296	Clip
28	9781502	Spacer, Door (8)
30	9750693	Channel, Heat
31	9781072	Screw, 10−24 x 3/8

OVEN CHASSIS PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

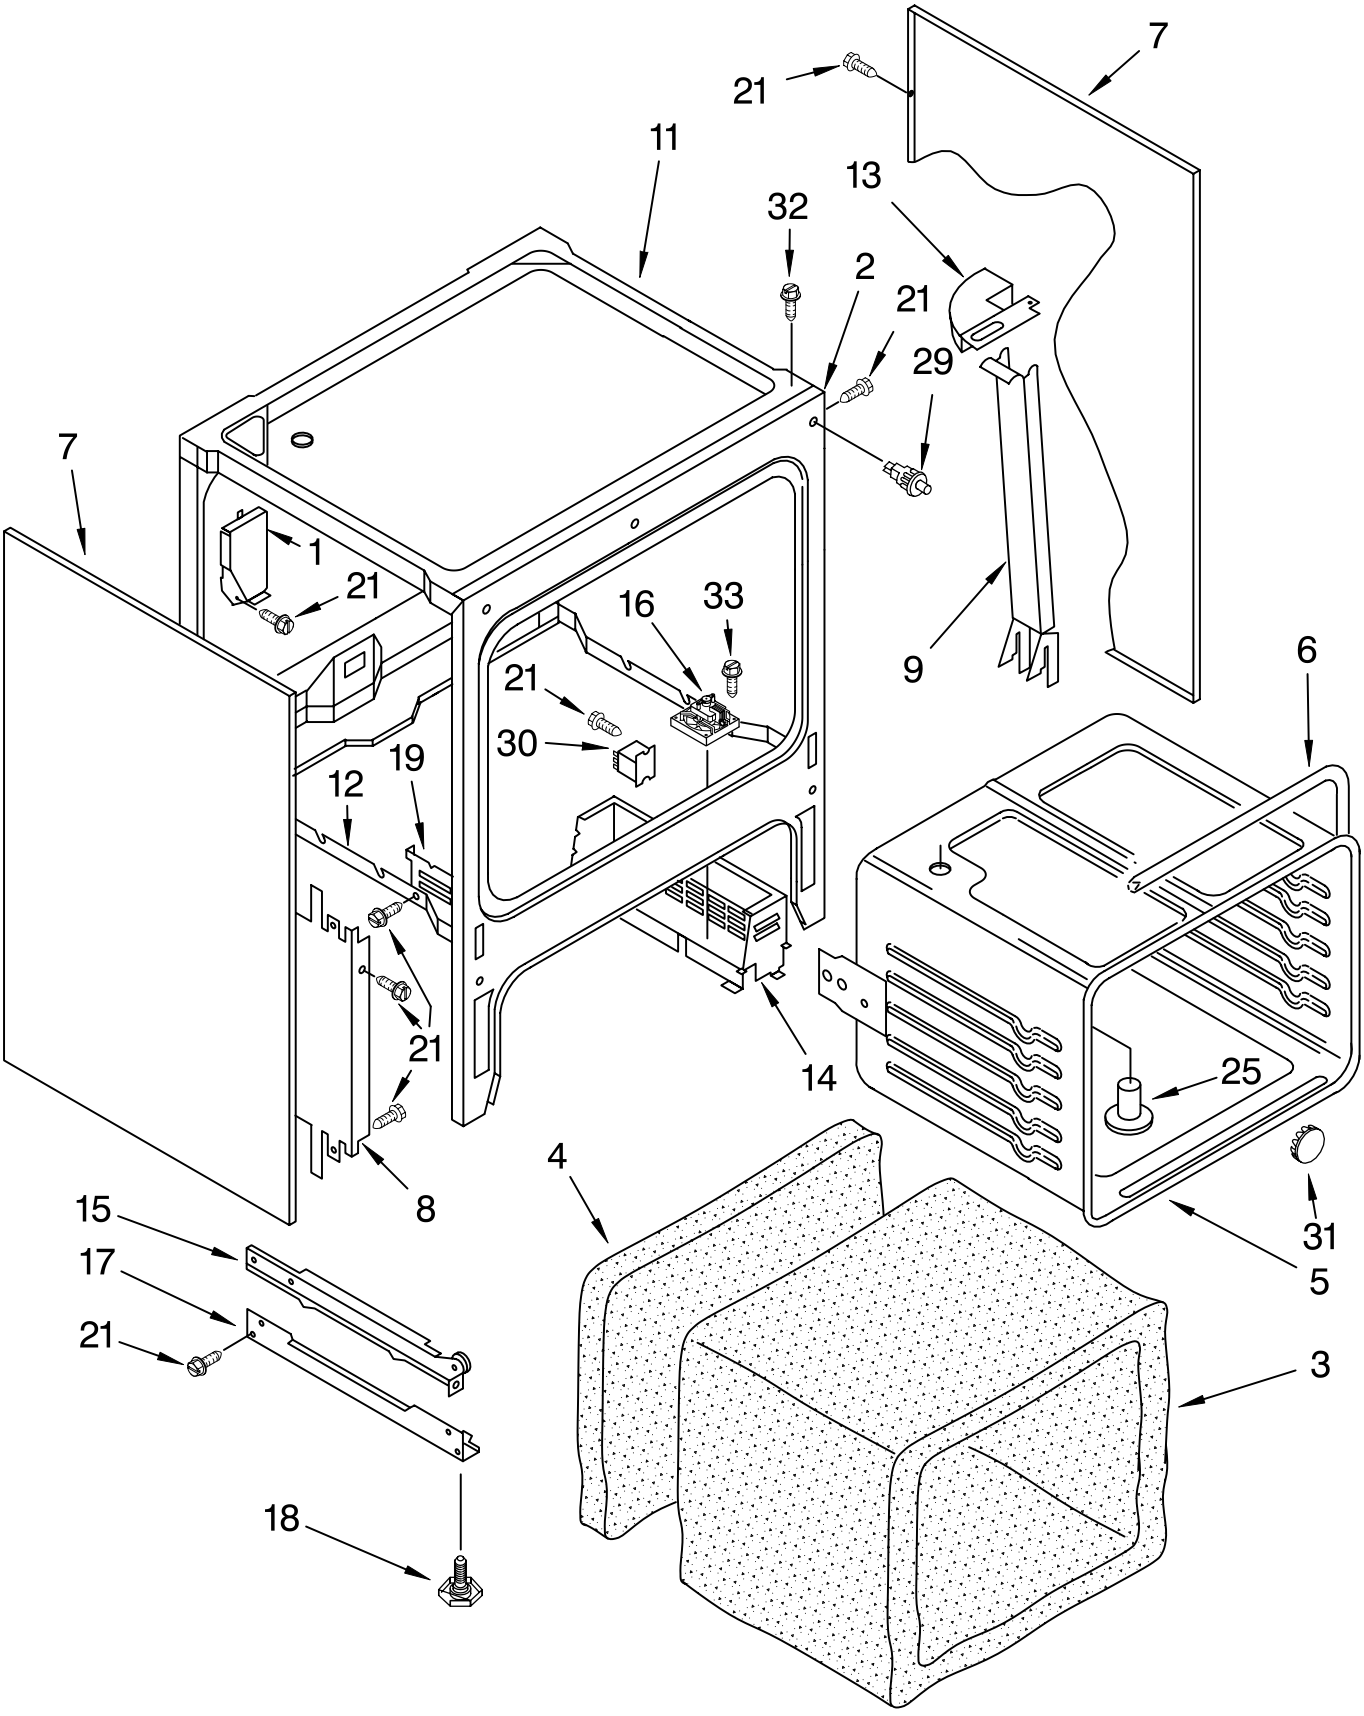

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754000	Insulation, Wrap
4	9754011	Insulation, Rear
5	9781293GM	Oven Liner
6	9755179	Gasket Oven
7		Oven, Side
	9781907PW	White
	9781907PC	Biscuit
	9781907PB	Black
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
11	9752637	Burner Box
12	9750142	Oven Bottom
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge, Door L or R
21	9780265	Screw, 10−16 x 3/8
25	9753091	Vent, Tube
29	9755192	Door Switch
30	9755194	Relay, Dbl.
31	9780578	Button, Plug
32	9780272	Screw, 10−16 x 1/2
33	9751808	Screw, 8−18 x 1

OVEN PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

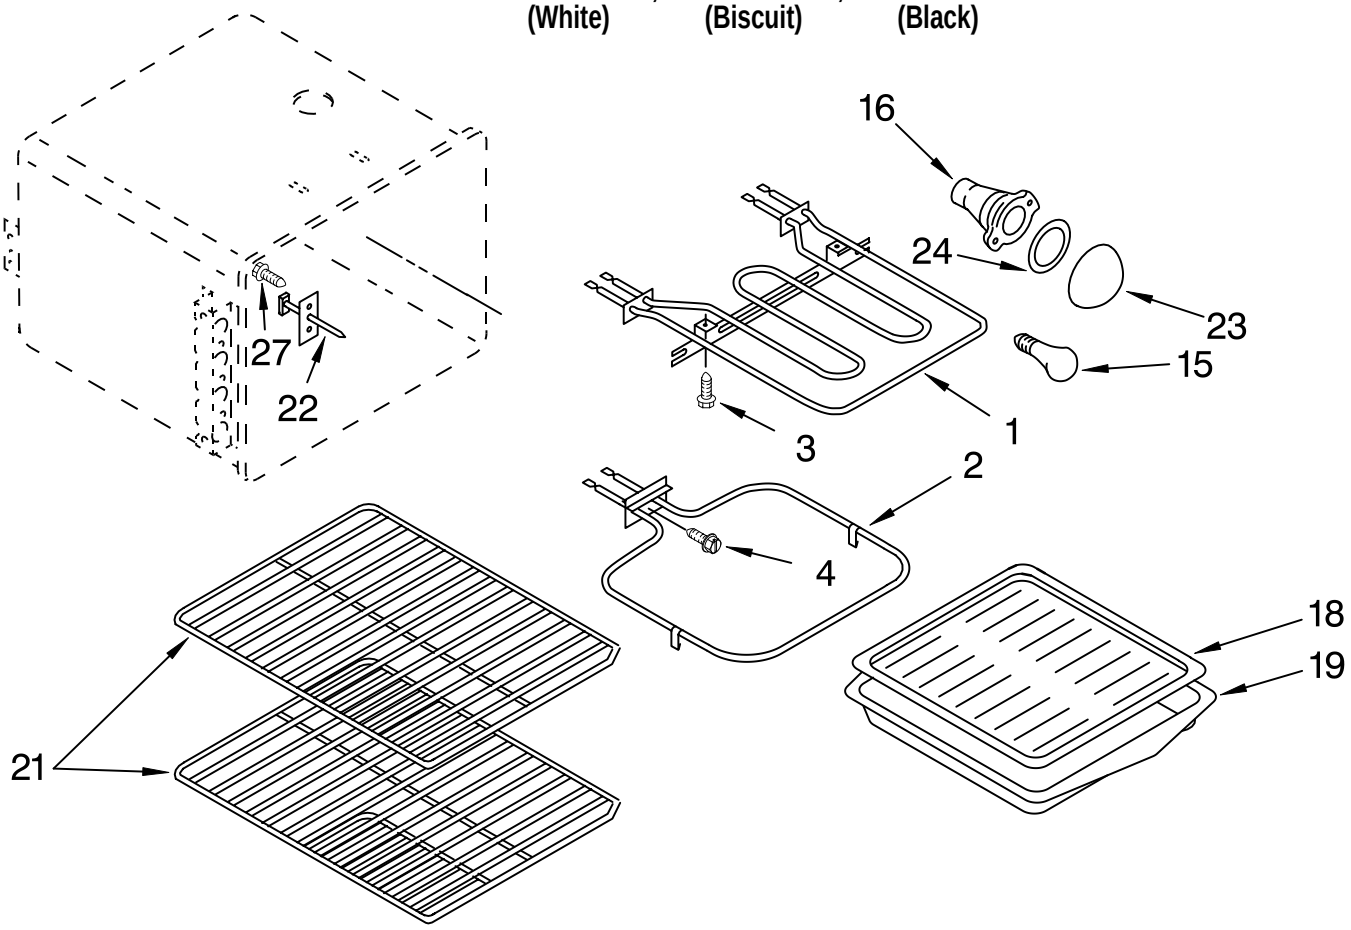

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
2	9750213	Element, Bake
3	9781509	Screw, 8−32 x 3/8
4	340184	Screw, 10−16 x 1
15	8935	Bulb, Oven
16	9781050	Light, Socket
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
21	9750498	Rack, Standard
22	9782081	Sensor
23	9781049	Lens, Light
24	3184533	Gasket, Light
27	9780265	Screw, 10−16 x 3/8

REAR CHASSIS PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

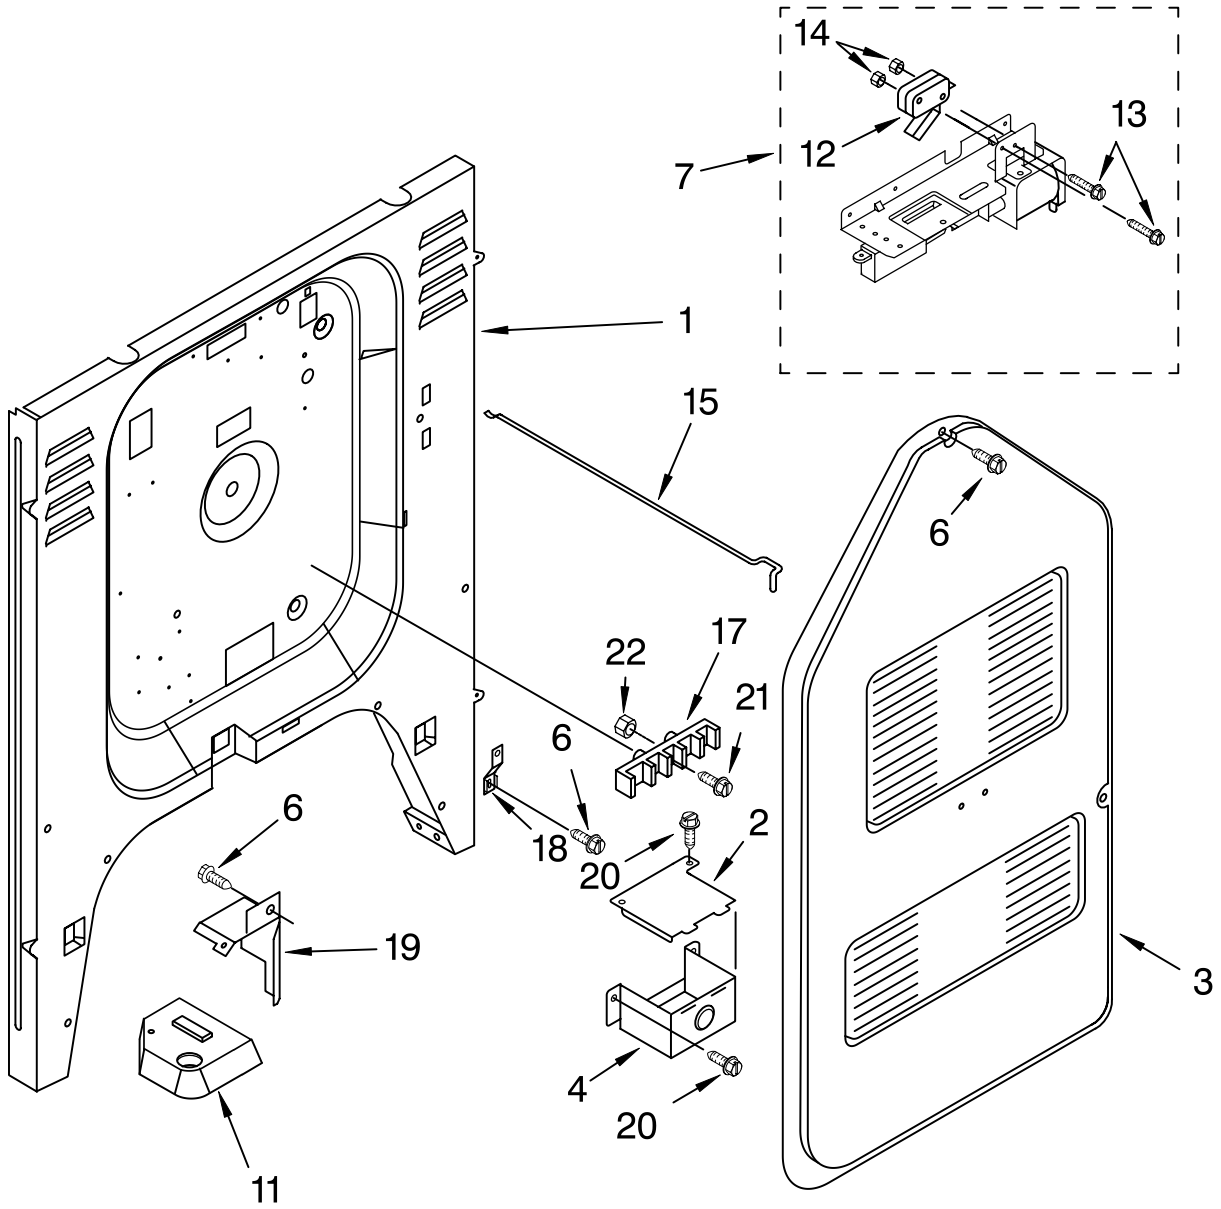

Illus. No.	Part No.	DESCRIPTION
1	9751051	Rear, Chassis
2	9752345	Cover, Terminal Box
3	9751353	Panel, Rear Cover
4	9752344	Box, Terminal
6	9780265	Screw, 10−16 X 3/8
7	9755001	Oven Lock Assembly
11	9782330	Block, Balance
12	9754291	Switch, Interloc
13	9750887	Screw, 4−40 x 1
14	9750888	Nut
15	9750523	Rod, Lock
17	258076	Terminal Block
18	3169573	Strap, Ground
	313660	Clip
19	9751798	Vent, Back
20	9780272	Screw, 10−16 x 1/2
21	98884	Screw, 10−16 x 1
22	112432	Nut, Hex #10−32

MISCELLANEOUS PARTS

For Models: KESC300HWH6, KESC300HBT6, KESC300HBL6
(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
4392899	Biscuit
511873	White Porcelain (2 Oz.)

NOTE: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
4392901	Biscuit
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)

CLEANER, COOKTOP

9780196	Glass Cleaner
3183488	Scraper

ACCESSORIES

241430	Foil, Aluminum Oven (18" X 25')

LUBRICANT

261582	Grease

ANTI−TIP KIT

9751745	Anti−Tip Kit

WIRING HARNESS PARTS

9755015	Harness, Wire (SI/Main/NC)
9781655	Harness, Wire (L2 Electric)
9781767	Harness, Wire (Control, Ceran)
9782183	Harness, Wire (Cooktop)
9781769	Harness, Wire (Front Console)
9755193	Harness, Wire (Door Switch)
9782182	Harness, Wire (Dual Element)
20082084	Tie, Wire
9751868	Grommet, Harness
9782111	Tie, Wire
98997	Clip, Wire
90016	Clip, Harness